RAILROAD COMMISSION OF TEXAS

FORM PR GAS DISPOSITION TAPE

MAGNETIC TAPE USER'S GUIDE

# PUBLISHED BY THE RAILROAD COMMISSION OF TEXAS P.O. BOX 12967 - CAPITOL STATION AUSTIN, TEXAS 78711-2967

This publication was developed for the general public in response to inquiries concerning the availability of oil (W-10) information on magnetic tape. If you request assistance in using the manual, your request will be given every consideration.

First Edition: April 1983
Revised: October 1998
Revised: February 2005

The Railroad Commission does not discriminate on the basis of race, color, national origin, sex, religion, age or disability. Information is available upon request by calling (512)463-7288 or (TDD) 1-800-735-2989 if special assistance is required.

Publication Number: OGA086

# TABLE OF CONTENTS

ITEM						PAGE
I.	GENERAL INFORMAT	ION				
	IDENTIFICATION GENERAL DESCRI PHYSICAL TAPE	PTION	ISTI(	CS		I.1 I.1 I.2
II.	FILE INFORMATION					
	PR GAS DISPOSI PR GAS DISPOSI PR GAS DISPOSI	TION FILE	OIL	SYSTEM	DATA DESCRIPTION	II.1 II.2 II.3
		-			DATA DESCRIPTION	II.4



## Identification

Developed For: Users of the Form PR Gas

Disposition file.

By: Railroad Commission of Texas

System Name: Oil and Gas System

Computer: IBM 2003-116

# GENERAL DESCRIPTION

\_\_\_\_

This file contains gas disposition information extracted from Form PR (formerly Form P-1's & P-2's) during a given production cycle, All production reports filed on the new forms (revised 2/11/05) that contain gas disposition volumes will appear on this file. This includes reports for the most recent reporting month as well as corrected reports for previous production months.

# PHYSICAL TAPE CHARACTERISTICS

## EBCDIC Character set

IBM Standard Labels

(One 80-character volume label, two 80-character header labels and two 80-character trailer labels)

Dataset Name: T.OLF102

T.GSF102

Record Length: 200

Blocking Factor: 50

Block Size: 10,000



## OLW102A3: WORKING-STORAGE COPY FOR V.OLF102 PR GAS DISPOSITION FILE OIL SYSTEM

```
01 GD-PR-CASINGHEAD-DISP-TRANS-RECORD.
   03 GD-PR-RECORD-KEY.
                                    PIC 99 VALUE ZERO.
       05 GD-PR-DISTRICT
                                                             1
           88 GD-PR-VALID-DISTRICT VALUE 01, 02,
                                   03, 04, 05, 06,
                                   07, 08, 09, 10,
                                   11, 13, 14.
       05 GD-PR-LEASE-NO
                                    PIC 9(5) VALUE ZERO.
       05 GD-PR-REPORT-DATE.
           07 GD-PR-REPORT-CCYY.
               10 GD-PR-REPORT-CENT PIC 99 VALUE ZERO.
                                                              8
               10 GD-PR-REPORT-YEAR PIC 99 VALUE ZERO.
                                                              10
                  GD-PR-REPORT-MONTH PIC 99 VALUE ZERO.
           07
                                                              12
   03
           GD-PR-CASINGHEAD-
           BALANCING-CODE
                                    PIC X
                                             VALUE SPACE.
                                                              14
       88 GD-PR-CASINGHEAD-IN-BALANCE
                                             VALUE 'I'.
       88 GD-PR-CASINGHEAD-OUT-OF-BALANCE
                                            VALUE 'O'.
   03
           GD-PR-DISCREPANCY-PRINTED-CODE PIC X VALUE SPACE.
                                                              15
       88 GD-PR-DISCREPANCY-PRINTED
                                      VALUE 'P'.
       88 GD-PR-DISCREPANCY-NOT-PRINTED VALUE 'N'.
           GD-PR-DISPOSITION-CODE-FLAG PIC X VALUE SPACE.
   0.3
                                                              16
          GD-PR-INVALID-DISP-CODE
                                             VALUE 'Y'.
   03
           GD-PR-TRANSACTION-ID-INFO.
                                       PIC 9(8) VALUE ZERO. 17
       05 GD-PR-FIELD-NUMBER
       05 GD-PR-CODING-MAST-OP-NUMBER PIC 9(6) VALUE ZERO. 25
       05 GD-PR-COMPANY-TAPE-OP-NUMBER PIC 9(6) VALUE ZERO. 31
       05 GD-PR-LEASE-NAME
                                        PIC X(32) VALUE SPACES.37
                                        PIC X(32) VALUE SPACES.69
       05 GD-PR-FIELD-NAME
   03
           GD-PR-CASINGHEAD-DISPOSITION-INFO.
                                                VALUE SPACE. 101
       04 GD-PR-BATCH-CODE
                                        PIC X
       04 GD-PR-CERT-DATE
                                        PIC 99 VALUE ZERO. 102
       04 GD-PR-CASINGHEAD-DISPOSITION-VOLUMES.
           05 GD-PR-LEASE-FLD-FUEL-SYSTEMS PIC 9(9) VALUE ZERO.104
           05 GD-PR-TRANSMISSION-LINE PIC 9(9) VALUE ZERO.113
                                          PIC 9(9) VALUE ZERO.122
           05
              GD-PR-PROCESSING-PLANT
                                          PIC 9(9) VALUE ZERO.131
           05
              GD-PR-VENTED-OR-FLARED
           05 GD-PR-CASINGHEAD-LIFT
                                          PIC 9(9) VALUE ZERO.140
           05 GD-PR-PRESSURE-MAINTENANCE PIC 9(9) VALUE ZERO.149
                                         PIC 9(9) VALUE ZERO.158
           05 GD-PR-CARBON-BLACK
           05 GD-PR-UNDERGROUND-STORAGE PIC 9(9) VALUE ZERO.167
           05 GD-PR-CASINGHEAD-PRODUCTION PIC 9(9) VALUE ZERO.176
           05 GD-PR-CASINGHEAD-LIFT-
           06
              GAS-INJECTED
                                          PIC 9(9) VALUE ZERO.185
       04 FILLER REDEFINES GD-PR-CASINGHEAD-DISPOSITION-VOLUMES.
           05 GD-PR-CASINGHEAD-DISPOSITION OCCURS 10 TIMES
                                         PIC 9(9).
   03 FILLER
                                         PIC X(7) VALUE ZERO. 194
```

### GD-PR-CASINGHEAD-DISP-TRANS-RECORD:

```
* GD-PR-CASINGHEAD-BALANCING-CODE
     GAS PRODUCTION + GAS LIFT GAS INJECTED = SUM OF ALL
     THE GAS DISPOSITIONS ADDED TOGETHER. THE CODE INDICATES
     WHETHER OR NOT THE GAS AMOUNTS BALANCE.
* GD-PR-DISCREPANCY-PRINTED-CODE
     USED IN CONJUNCTION WITH THE GD-PR-GAS-BALANCING-CODE AND
     THE GD-PR-DISPOSITION-CODE-FLAG TO PREVENT DISCREPANCIES
     FROM BEING PRINTED REDUNDANTLY.
* GD-PR-DISPOSITION-CODE-FLAG
     THE FORM PR SOURCE DOCUMENT CONTAINS A GAS DISPOSITION
     VOLUME WITH AN INVALID GAS DISPOSITION CODE.
* GD-PR-CODING-MAST-OP-NUMBER
     OPERATOR OF THE WELL ON RECORD.
* GD-PR-COMPANY-TAPE-OP-NUMBER
     IF THE TRANSACTION WAS ENTERED INTO THE SYSTEM FROM A
     PRODUCER'S MAGNETIC TAPE, THIS DATA FIELD WILL CONTAIN
     THE OPERATOR NUMBER OF THE COMPANY FILING ON TAPE.
     OTHERWISE, IT WILL BE ZEROES.
* GD-PR-BATCH-CODE
     THIS DATA ITEM IS NO LONGER AVAILABLE ON THIS FILE.
 GD-PR-CERT-DATE
     USED IN OIL UPDATE PROCESS. CALENDAR DAY PLACED ON THE FORM
     PR BATCH SLIP. FOR A LATE, CORRECTED OR RETRO PR TO POST,
     THE CERTIFICATION DATE (CERT DATE) MUST BE GREATER THAN THE
     CERT DATE ON FILE. SINCE THE UPDATE CYCLE BEGINS DURING
     MID-MONTH, THE FIRST CERT DATE MAY BE '16' AND WILL BE
     INCREMENTED ACCORDING TO THE DAY'S DATE. HOWEVER, ON THE
     FIRST OF THE NEXT MONTH A '4' IS APPENDED BEFORE THE DATE.
     FOR EXAMPLE, THE CERT DATES FOR 'OCTOBER 1,2,3' WOULD BE
     '41,42,43' AND 'OCTOBER 10,11,12' WOULD BE '50,51,52.'
     PRODUCTION AND PRORATION ADOPTED '77' AS A CERT DATE FOR
     CORRECTED AND LATE REPORTS. CERT DATE '00' IS USED ON
     'FICTITIOUS' REPORTS TO ZERO OUT (MAKE DELINQUENT) AN
     OUT-OF-BALANCE REPORT DUE TO AN OPERATOR FILING ON A WRONG
     LEASE NUMBER.
* GD-PR-CASINGHEAD-DISPOSITION-VOLUMES.
     GAS VOLUMES ARE REPORTED IN MCF (THOUSAND CUBIC FEET)
     AT BASE PRESSURE OF 14.65 PSI AND BASE TEMPERATURE OF
     60 DEGREES FAHRENHEIT. (FORM PR; D. GENERAL INSTRUCTIONS)
```

GSW102A1: WORKING-STORAGE COPY FOR V.GSF102 PR GAS-WELL-GAS DISPOSITION FILE GAS SYSTEM

```
01 GD-PR-GAS-WELL-GAS DISP-TRANS-RECORD.
                                                              POSITION
   03 GD-PR-RECORD-KEY.
                                        PIC 99 VALUE ZEROS. 1
       05 GD-PR-DISTRICT
       05 GD-PR-GAS-WELL-GAS RRCID PIC 9(6) VALUE ZEROS. 3
       05 GD-PR-REPORT-DATE.
                                       PIC 9999 VALUE ZEROS. 9
           10 GD-PR-REPORT-YEAR
           10 GD-PR-REPORT-MONTH PIC 99 VALUE ZEROS. 11
   03 GD-PR-GAS-WELL-GAS BALANCING-CODE PIC X VALUE SPACES.13
       88 GD-PR-GAS-WELL-GAS
           IN-BALANCE
                                        VALUE 'I'.
       88 GD-PR-GAS-WELL-GAS OUT-OF-BALANCE VALUE 'O'.
   03 GD-PR-DISCREPANCY-PRINTED-CODE PIC X
                                                VALUE SPACES.14
       88 GD-PR-DISCREPANCY-PRINTED VALUE 'P'.
       88 GD-PR-DISCREPANCY-NOT-PRINTED VALUE 'N'.
   03 GD-PR-INVALID-OR-OMITTED-CODE PIC X
                                               VALUE SPACES.15
       88 GD-PR-VALID-CODE
                                        VALUE 'N'.
       88 GD-PR-INVALID-CODE
                                        VALUE 'Y'.
   03 GD-PR-EXTRACTION-LOSS-CODE PIC X
                                                VALUE SPACES.16
       88 GD-PR-EXTRACTION-LOSS-VALID VALUE 'V'.
       88 GD-PR-EXTRACTION-CODE-MISSING VALUE 'M'.
       88 GD-PR-CONDENSATE-MISSING
                                        VALUE 'C'.
       88 GD-PR-EXTRACTION-LOSS-EXCESS VALUE 'E'.
       88 GD-PR-EXTRACTION-LOSS-DEFICIT VALUE 'D'.
   03 GD-PR-TRANSACTION-ID-INFO.
       05 GD-PR-CODING-MAST-OP-NUMBER PIC X(6) VALUE ZEROS. 17
       05 GD-PR-COMPANY-TAPE-OP-NUMBER PIC X(6) VALUE ZEROS. 23
       05 GD-PR-FIELD-NUMBER
                                      PIC X(8) VALUE ZEROS. 29
       05 GD-PR-FIELD-NAME
                                      PIC X(32) VALUE SPACES. 37
                                      PIC X(32) VALUE SPACES. 69
       05 GD-PR-LEASE-NAME
          GD-PR-GAS-WELL-GAS NUMBER PIC X(6) VALUE SPACES. 101
       05 GD-PR-BATCH-CODE
                                      PIC X VALUE SPACES. 107
   03 GD-PR-GAS-DISPOSITION-VOLUMES.
       05 GD-PR-LEASE-FLD-FUEL-SYSTEMS PIC 9(7) VALUE ZEROS. 108
       05 GD-PR-TRANSMISSION-LINE
                                       PIC 9(7) VALUE ZEROS. 115
                                        PIC 9(7) VALUE ZEROS. 122
       05 GD-PR-PROCESSING-PLANT
                                        PIC 9(7) VALUE ZEROS. 129
       05
          GD-PR-VENTED-OR-FLARED
          GD-PR-GAS-WELL-GAS LIFT
                                       PIC 9(7) VALUE ZEROS. 136
       05
                                      PIC 9(7) VALUE ZEROS. 143
       05
          GD-PR-PRESSURE-MAINTENANCE
       05 GD-PR-CARBON-BLACK
                                       PIC 9(7) VALUE ZEROS. 150
       05 GD-PR-UNDERGROUND-STORAGE PIC 9(7) VALUE ZEROS. 157
05 GD-PR-EXTRACTION-LOSS PIC 9(7) VALUE ZEROS. 164
       05 GD-PR-GAS-WELL-GAS PRODUCTION PIC 9(7) VALUE ZEROS. 171
       05 GD-PR-GAS-WELL GAS LIFT-
           INJECTED
                                        PIC 9(7) VALUE ZEROS. 178
   03 FILLER REDEFINES GD-PR-GAS-WELL-GAS DISPOSITION-VOLUMES.
       05 GD-PR-GAS-WELL-GAS DISPOSITION OCCURS 11 TIMES
                                        PIC X(7).
   03 GD-PR-CONDENSATE-PRODUCTION
                                        PIC 9(5) VALUE ZEROS. 185
   03 FILLER
                                     PIC X(09) VALUE ZEROS. 190
```

#### GD-PR-GAS-WELL-GAS DISP-TRANS-RECORD:

```
GD-PR-GAS-WELL-GAS BALANCING-CODE
     GAS PRODUCTION + GAS LIFT GAS INJECTED = SUM OF ALL
     THE GAS DISPOSITIONS ADDED TOGETHER. THE CODE INDICATES
     WHETHER OR NOT THE GAS AMOUNTS BALANCE.
* GD-PR-DISCREPANCY-PRINTED-CODE
     USED IN CONJUNCTION WITH THE GD-PR-GAS-WELL-GAS BALANCING-CODE TO
     PREVENT DISCREPANCIES FROM BEING PRINTED REDUNDANTLY.
* GD-PR-INVALID-OR-OMITTED-CODE
     THE FORM PR SOURCE DOCUMENT CONTAINS A GAS DISPOSITION
     VOLUME WITH AN INVALID GAS DISPOSITION CODE.
 GD-PR-EXTRACTION-LOSS-CODE
     IF CONDENSATE PRODUCTION IS GREATER THAN ZERO, A GAS
     DISPOSITION VOLUME TO A CODE '9' (WELL SEPARATION EXTRACTION
     LOSS) MUST BE REPORTED.
         MINIMUM EXTRACTION LOSS = .7 \times CONDENSATE
         MAXIMUM EXTRACTION LOSS = 1.5 * CONDENSATE
 GD-PR-BATCH-CODE
     ALPHABETIC OR SPECIAL CHARACTER ASSIGNED BY THE AUDIT AND
     PERMIT SECTION TO A BATCH OF FORM PR'S KEYED BY
     KEY ENTRY. THIS CODE IS USED BY O&G PEOPLE AS AN AID IN
     LOCATING A DESIRED PR.
* GD-PR-CODING-MAST-OP-NUMBER
     OPERATOR OF THE WELL ON RECORD.
* GD-PR-COMPANY-TAPE-OP-NUMBER
     IF THE TRANSACTION WAS ENTERED INTO THE SYSTEM FROM A
     PRODUCER'S MAGNETIC TAPE, THIS DATA FIELD WILL CONTAIN
     THE OPERATOR NUMBER OF THE COMPANY FILING ON TAPE.
     OTHERWISE, IT WILL BE ZEROES.
* GD-PR-GAS-WELL-GAS DISPOSITION-VOLUMES
     GAS VOLUMES ARE REPORTED IN MCF (THOUSAND CUBIC FEET)
     AT BASE PRESSURE OF 14.65 PSI AND BASE TEMPERATURE OF
     60 DEGREES FAHRENHEIT. (FORM PR; D. GENERAL INSTRUCTIONS)
```